

QUICKSTART GUIDE

HD WIRELESS SOUND FOR YOUR HDTV

connect

UNIVERSAL DUAL BLUETOOTH®

WIRELESS AUDIO TRANSMITTER

For Headphones and Speakers

www.MEEaudio.com/Connect

Model: AF-T1B

CONNECT SUPPORT GUIDE



Scan QR code or enter the URL
below into your web browser:
MEEaudio.com/ConnectVid




COMPLETE ALL 4 STEPS. REMEMBER TO PLUG IN ONE POWER CABLE AND ONE AUDIO CABLE


STEP 1

GETTING STARTED

PACKAGE CONTENTS:

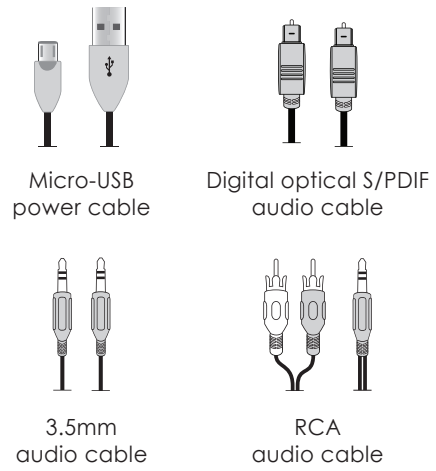

connect OVERVIEW:

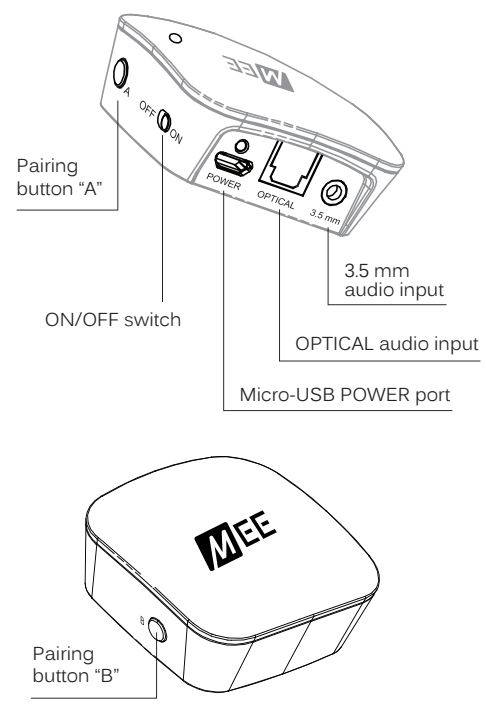


POWER ON

1. Ensure the **micro-USB power cable** is plugged into the **micro-USB POWER** port of the **Connect**.

2. Plug the USB end of the cable into an AC adapter, TV, or computer USB port.



3. Slide the **ON/OFF** switch to the **ON** position.

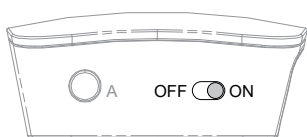

4. Proceed to **STEP 2**


STEP 2

PAIR WITH BLUETOOTH HEADPHONES


1. Put your Bluetooth headphones in pairing mode.

Consult the user manual of your Bluetooth headphones if you are not sure how to put them in pairing mode

2. Once the headphones are in pairing mode, click **Pairing button "A"** once to put the **Connect** in pairing mode.

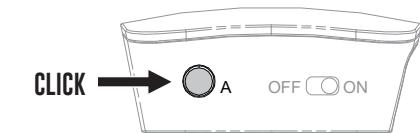

Blinking blue light will change to solid blue light once successfully paired.

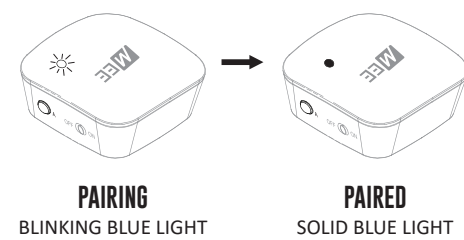

3. If you need to pair a second Bluetooth headphone, see below. Otherwise, proceed to **STEP 3**


OPTIONAL: PAIR WITH 2ND BLUETOOTH HEADPHONES

A second set of Bluetooth headphones can be paired after one is already connected.


1. Put the second headphone in pairing mode.

Consult the user manual of your Bluetooth headphones if you are not sure how to put them in pairing mode

2. Once the headphones are in pairing mode, click **Pairing button "B"** once to put the **Connect** in pairing mode.

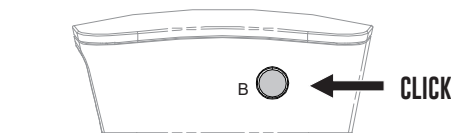

Blinking blue light will change to solid blue light once successfully paired.

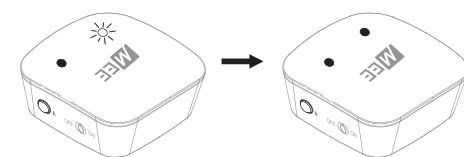

PAIRING SIDE "B" BLINKING BLUE LIGHT

TWO HEADPHONES PAIRED TWO SOLID BLUE LIGHTS

3. Proceed to **STEP 3**


STEP 3

Choose ONLY ONE audio cable supported by your TV

CHOICE A: OPTICAL

1. Remove protective caps from both ends of the **digital optical S/PDIF audio cable**

2. Plug **digital optical S/PDIF audio cable** into the **OPTICAL audio input** of the **Connect**.

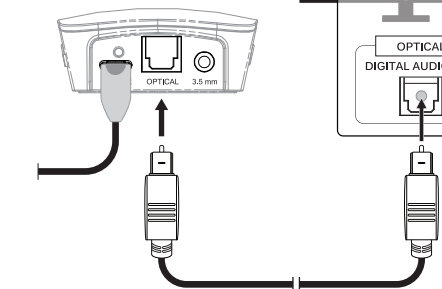


3. Plug the other end into the TV's **DIGITAL AUDIO OUT (OPTICAL)** port.

4. Test for sound. Make sure the volume on both your TV and headphones is turned up.

5. Proceed to **STEP 4**


NO SOUND? CHECK YOUR TV SETTINGS.

1. Change **Sound Output** to "Optical"***

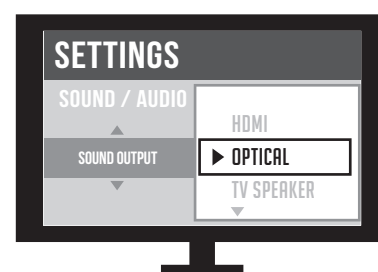

2. Change **Digital Audio Output Format** to "STEREO" or "PCM"***

This may also need to be done in the audio output settings menu(s) of your streaming app(s) and/or device(s) such as Apple TV®

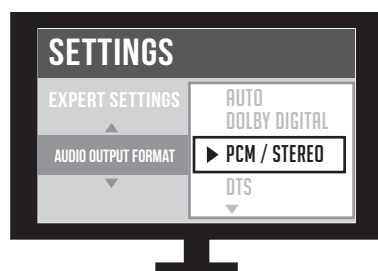


***Exact menu and item names may vary between TVs.
†On some TVs settings may be located in "Advanced settings" or "Expert settings" submenus.

3. Proceed to **STEP 4**

CHOICE B: 3.5 MM

1. Plug **3.5 mm audio cable** into the **3.5 mm audio input** of the **Connect**.

2. Plug the other end into the TV's **headphone jack**.

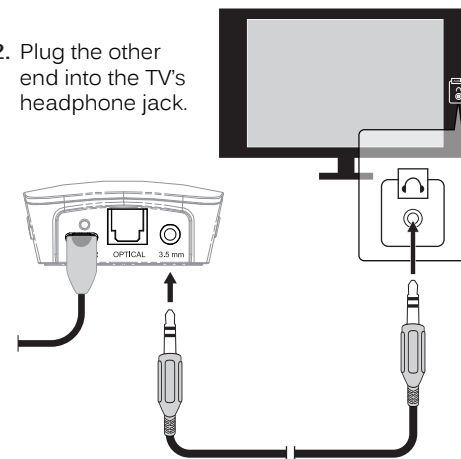


* Headphone jack may be located on rear, side, front, or bottom of TV.

3. Test for sound. Make sure the volume on both your TV and headphones is turned up.

4. Proceed to **STEP 4**

CHOICE C: RCA

1. Plug red/white ends of **RCA audio cable** into the TV's **red/white RCA AUDIO OUT** port.

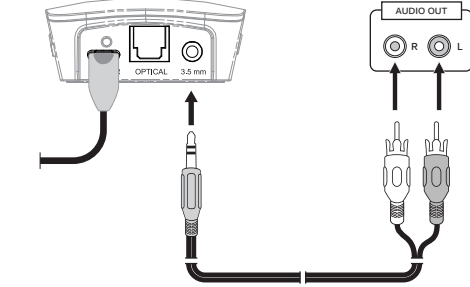

2. Plug **3.5 mm end of RCA audio cable** into the **3.5 mm audio input** of the **Connect**.


RCA jacks on TV must be designated an **AUDIO OUT**. RCA input jacks, commonly labeled **AV IN, INPUT, or COMPONENT** will not work.

3. Test for sound. Make sure the volume on both your TV and headphones is turned up.


4. Proceed to **STEP 4**

NO SOUND? CHECK YOUR TV SETTINGS.

1. Change audio output settings to "VARIABLE".

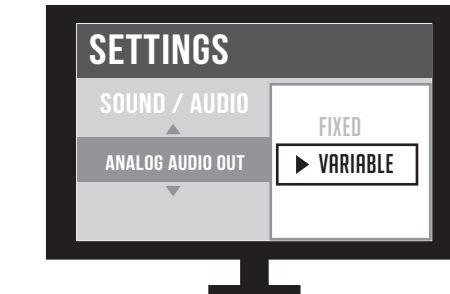

2. Set TV's internal speakers to "OFF".

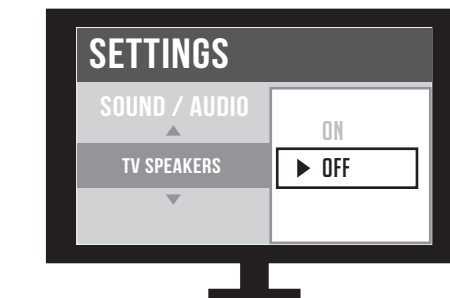


**Exact menu and item names may vary between TVs.

3. Proceed to **STEP 4**


STEP 4

ADJUSTING VOLUME

Maximize the volume level on your TV, then use volume controls on headphones to adjust to preferred volume.

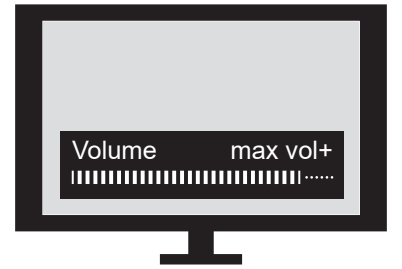

If you are using the **Optical cable**, you may mute the TV speakers, which allows you to directly control the volume on your Bluetooth headphones.

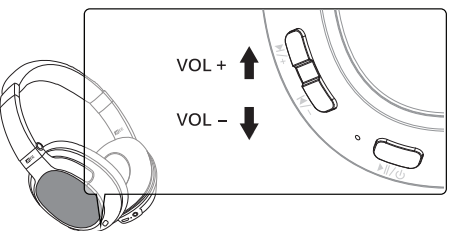


WHEN FINISHED, POWER OFF HEADPHONES UNTIL NEXT USE

SUBSEQUENT USE

WHEN READY TO USE AGAIN, POWER ON THE HEADPHONES AND THEY WILL RECONNECT AUTOMATICALLY.

Do not put the Connect or your headphones into pairing mode.

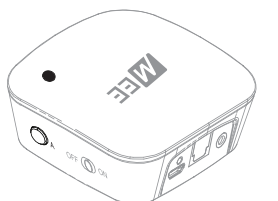


A solid blue light on the Connect will indicate that a connection has been re-established.

The Connect transmitter can be left powered on and plugged into USB power for future use.

Note: if the power cable of your Connect transmitter is plugged into your TV's USB port and it has been a week or longer since you used it, power your TV on first and give the Connect transmitter a few minutes to charge. We also recommend charging the Connect transmitter at least once every 30 days, so if you plan to be away from your TV for a month, it may be better to plug the Connect into a wall charger.

NEED HELP? VIEW OUR VIDEO SETUP GUIDE

Scan QR code or enter the URL below into your web browser:
MEEaudio.com/ConnectVid

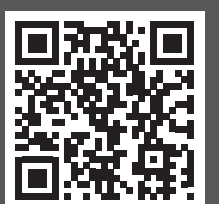

Note: you should have **ONE** power cable and **ONE** audio cable plugged into your Connect transmitter.

ADDITIONAL INFORMATION

FACTORY RESET/CLEAR MEMORY

To perform a factory reset of the **Connect**, hold **Pairing button "A"** for approximately 5 seconds until the blue indicator light stops blinking.

All previously paired devices will be cleared from memory and a new pairing will need to be created by following the procedure in **STEP 2**

LED INDICATOR LIGHTS

The status of the **Connect** is shown by a green power / charging indicator light on the rear of the unit and two blue indicator lights on the top as follows:

INDICATOR LIGHT (S)	CONNECT STATUS
USB Power plugged in, green power indicator light solid	Battery full
USB Power plugged in, green power indicator light pulsing slowly	Charging
USB Power not plugged in, green power indicator light solid	Powered on
USB Power not plugged in, green power indicator light blinking rapidly	Low battery
Blue light blinking	Pairing mode active
One solid blue light	One Bluetooth device is connected
Two solid blue lights	Two Bluetooth devices are connected

SAFETY AND CARE

- Battery performance will be severely decreased when stored in extreme temperatures: below -10°C/14°F or above 45°C/113°F including direct sunlight.
- The lifetime of the battery will be significantly reduced if your device is not charged for a long time. It is recommended to charge your device at least once a month.
- Clean with a soft, slightly damp cloth. Do not use chemical cleaners.
- There are no user replaceable/repairable parts in this device. Disassembling it will void your warranty.

WARNINGS

This device is designed and manufactured to operate within its defined design limits. Misuse may result in electric shock or fire. Read and follow these instructions carefully.

- To prevent fire or shock hazards, do not expose this unit to rain or moisture. If the device comes in contact with liquids, quickly wipe away. If submerged in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- Danger of explosion or fire if batteries are damaged. Keep away from direct sunlight, naked flames, flammable gasses, or heat sources such as radiators or stoves
- Only use attachments/accessories specified by the manufacturer

Changes or modifications to this unit not expressly approved by MEE audio could void the user's authority to operate the equipment.

Keep the device and packaging out of reach of children.

WARRANTY


MEE audio products purchased from authorized resellers are covered by a 1-year manufacturer warranty. For more information, visit MEEaudio.com/support

FOR ADDITIONAL SUPPORT

VIEW OUR VIDEO SETUP GUIDE

Scan QR code or enter the URL below into your web browser:

MEEaudio.com/ConnectVid

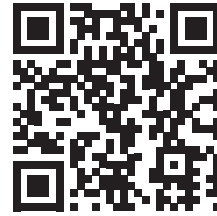

QUESTIONS?

- Get answers at MEEaudio.com/ConnectHelp

WE'RE HERE TO HELP!

Phone Support: 626-965-1008 x31
Monday ~ Friday 9am to 5:00pm PST

Email Support: support@MEEaudio.com
All emails are responded to within 2 business days

COMPLIANCE INFORMATION

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RULES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: Z63AFCONNECT01

DISPOSAL AND RECYCLING

Dispose of this product in accordance with all local laws and regulations. Because this product contains electronic components and a battery, it must be disposed of separately from household waste. Contact local authorities to learn about disposal and recycling options.

MEE audio and its logo are registered trademarks of S2E, Inc. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MEE audio is under license. Other trademarks and trade names are those of their respective owners.

Qualcomm® aptX™ is a product of Qualcomm Technologies International, Ltd. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.

Apple TV® is a registered trademark of Apple Inc.

